


North Effects – The RITE

Operating Instructions

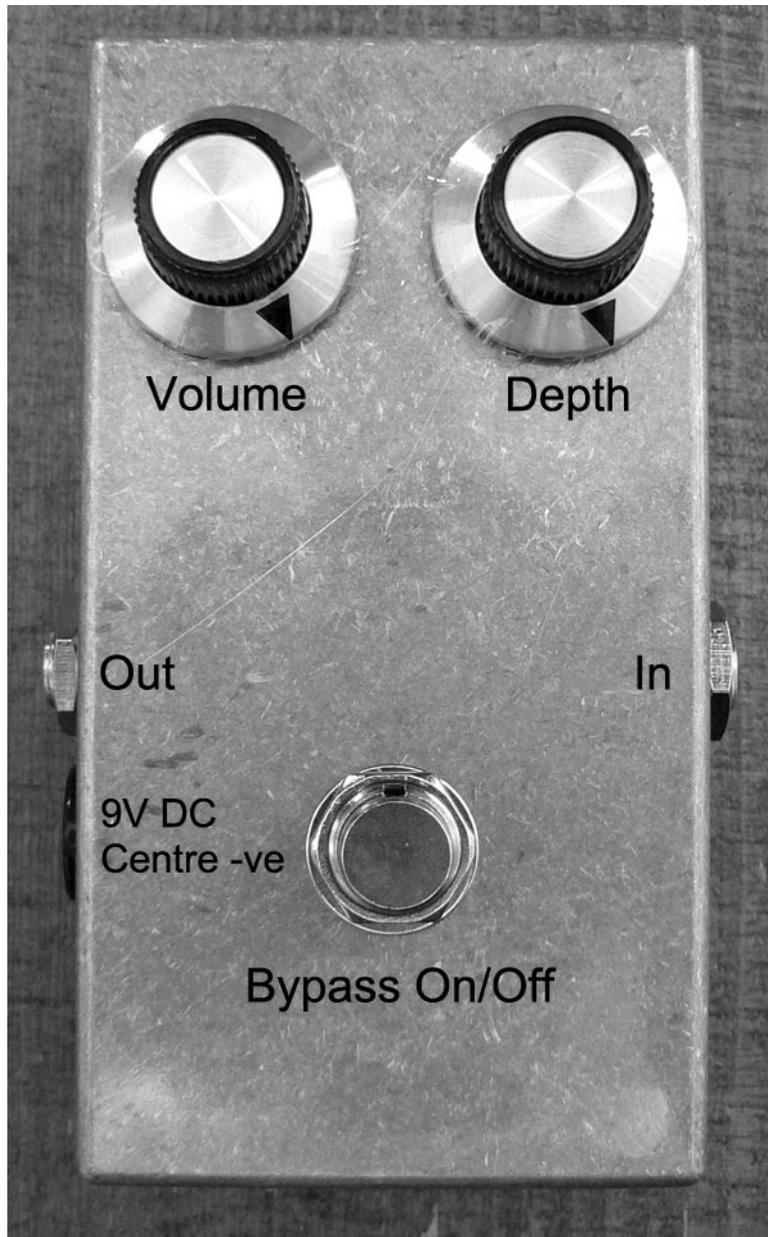

The FUZZRite has just two controls – Volume which controls the overall output level and Depth – the blend between the first and second distortion stages. It is laid out like most pedals with the instrument input on the right, output on the left. The footswitch is true bypass wired so that your instrument signal is not affected when the pedal is off.

The Depth control works interactively with the volume control on your instrument. To get a cleaner sound with less fuzz, roll back your guitar volume slightly and decrease the Depth. Take some time and experiment.

Powering up...



The unit can be powered by the 9V PP3 battery that comes installed, or via an external 9V DC power supply. It is recommended that you use a good quality regulated power supply, preferably one that has been specifically designed for use with effects pedals. When connecting to a power supply, please ensure that you have selected the correct polarity (centre negative) and voltage (9V) as connecting using the wrong polarity may cause damage to the unit's components. Also ensure that you are using the correct plug size (2.1mm). When operating with a power supply there is no need to remove the battery as it will be automatically disconnected when the power supply is plugged in.

When operating on battery power always ensure that you disconnect the input cable when you've finished playing. The battery remains connected as long as the input cable is plugged in, so you will prolong battery life by doing this. When the signal becomes weak or erratic it is time to change the battery - undo the four retaining screws at the base of the unit, remove the old battery, place the new one on the battery snap and tuck it back in behind the footswitch as in the picture.

This pedal is designed to provide many years of trouble-free service, however in the event of a problem please contact:

info@north-effects.co.uk

<http://north-effects.co.uk>